

user manual

guide de l'utilisateur

Made for
iPod

Conçu pour
iPod

Works with
iPhone

Fonctionne avec
iPhone

EN/F

It is important to read this user manual prior to using your new product for the first time.
Nous vous recommandons de lire ce manuel avant d'utiliser votre nouveau produit pour la première fois.

FCC information

FCC information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la class B est conforme à la norme NMB-003 du Canada.
- Illustrations contained within this publication are for representation only and subject to change.
- The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.
- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

General controls

Top view

- SNOOZE** – Turn off the wake function momentarily; turn off the sleep function
- REPEAT** – Select repeat playback mode for iPod/iPhone
- SLEEP** – Refer to “Sleep function”
- BRIGHTNESS** – Adjust display brightness
- RECALL** – Recall preset radio stations
- SHUFFLE** – Select random playback mode for iPod/iPhone
- WAKE 1** – Activate or change Wake 1 settings
- << or >>** – Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time and wake time
- SET** – Enter setting mode for setting clock time, Wake 1 time or Wake 2 time
- WAKE 2** – Activate or change Wake 2 settings
- STORE** – Save radio stations as presets

Auxiliary source

To select auxiliary mode:

- Connect your auxiliary source (e.g. mp3 player) to the AUX input jack at the back of the unit with an audio cable (not supplied).
- Press **AUX** to turn on the unit or to switch to listen to AUX from other modes.
- The auxiliary mode icon (**AUX**) lights on the display.
- Adjust the auxiliary player to mid-range volume and adjust the master volume on the unit. Do not turn the volume of the auxiliary player too high as this may affect the sound quality. For other playback operations, control them on your auxiliary player.

Wake function

Set wake time

This unit allows 2 wake times to be set.

- Press **SET** on the top of the unit until a WAKE 1 icon (**☞** **☐**) or **1☐** or a WAKE 2 icon (**☞** **☐** or **2☐**) flashes on the display.
- Press << or >> on the top of the unit to set the wake time. The time decrements or increments follow by a faster rate when you press and hold the button.
- The clock setting icon **☉** flashes when you are setting the time. AM or PM icon also lights beside the time.
- To save and exit the wake setting, wait for about 5 seconds or press **SET** until the clock setting icon (**☉**) is off and the wake setting icons (**☞** / **☐** / **1☐** or **☞** / **☐** / **2☐**) are either off or stop flashing.
- To check the wake time after setting, press **SET** until a WAKE 1 icon (**☞** / **☐** / **1☐**) or WAKE 2 icon (**☞** / **☐** / **2☐**) flashes and the respective assigned wake time shows on the display.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the power cord has been exposed to rain or moisture, does not operate normally, or has been dropped.
- **ADDITIONAL SAFETY INFORMATION**
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.



Portable Cart Warning

Before you begin

Plugging in for power

Insert the plug of the unit into an AC power outlet.

 
Refer to the “Clock” section and follow the instructions to get the clock time shown correctly with the Auto Clock set feature.

Battery back-up operation

This clock radio is equipped with a memory holding system that can be powered with 9V battery. The power failure protection circuit will not operate unless battery is installed. When normal household power is interrupted, or AC line cord is unplugged, the batteries will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function of alarm still occurs during the power interruption if remaining battery power is adequate. Normal operation will resume after AC power is restored so you will not have to reset the time or the alarm.

To install or replace the batteries:

- Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.

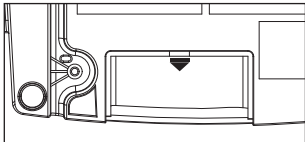


- Insert or replace a 9V battery (not included).
- Replace the compartment door.

- It is recommended to plug the unit for AC power while replacing batteries to avoid the loss of clock and wake time/mode settings.


Power failure indicator

When AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless batteries are installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

 - The AC/DC adapter supplied with this product is intended to be correctly oriented in a vertical or floor mount position.
- Do not use unauthorized chargers or power adapters. Use only chargers that came with your product or that is listed in the user's guide.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Connect power cord only to AC power source as marked on the product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.
- Caution marking is located at bottom of apparatus.

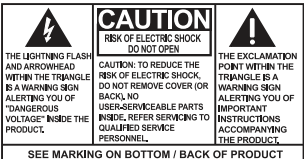

 WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



Plugging in for power
AC OUTLET POWER SUPPLY:
120 V ~ 60 Hz

 
Power is fed to the unit even when it is not functioning. To cut the power supply off, the power cable must be unplugged.

Important battery precautions


- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be

General controls

Front view

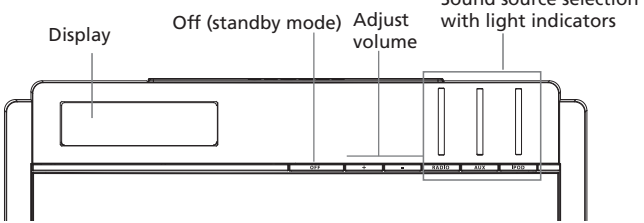

Rear view

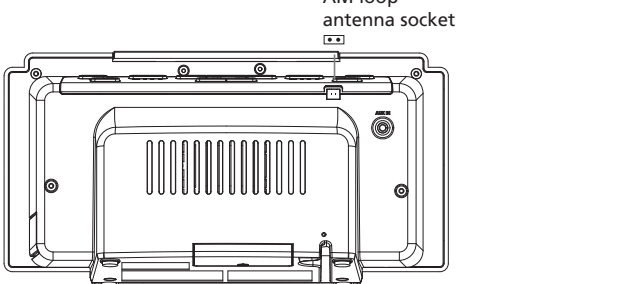 

AM loop antenna socket – Connect to the AM loop antenna

AUX IN – Auxiliary input jack

Technical information

Product: Clock Radio
Brand: RCA
Model: RC60i

Electrical consumption

Power Supply: 120 V ~ 60 Hz
Power Consumption: 8 Watts

iPhone is a trademark of Apple Inc.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

“Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

recharged, do not incinerate, and do not puncture.

- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

Ecology

Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

For your records

In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number:
Model No.:
Date of Purchase:
Place of Purchase:
Serial No.:

General controls

Top view

- SNOOZE** – Turn off the wake function momentarily; turn off the sleep function
- REPEAT** – Select repeat playback mode for iPod/iPhone
- SLEEP** – Refer to “Sleep function”
- BRIGHTNESS** – Adjust display brightness
- RECALL** – Recall preset radio stations
- SHUFFLE** – Select random playback mode for iPod/iPhone
- WAKE 1** – Activate or change Wake 1 settings
- << or >>** – Search radio frequencies; skip or search music file in iPod/iPhone; adjust clock time and wake time
- SET** – Enter setting mode for setting clock time, Wake 1 time or Wake 2 time
- WAKE 2** – Activate or change Wake 2 settings
- STORE** – Save radio stations as presets

Clock

Setting clock

- Press **SET** on the top of the unit until the clock setting icon (**☉**) flashes on the display.
- Press << or >> on the top of the unit to set the clock time. The time decrements or increments follow by a faster rate when you press and hold the button.
- The clock setting icon **☉** flashes when you are setting the time. AM or PM icon also lights beside the time.
- To save and exit the clock setting, wait for about 5 seconds or press **SET** until the clock setting icon (**☉**) is off and the wake setting icons (**☞** / **☐** / **1☐** or **☞** / **☐** / **2☐**) are either off or stop flashing.



Radio

Listening to the radio

- To turn on or off radio:**
- Press **RADIO** on the front of the unit to turn on the radio.
 - The radio mode icon (**☐**) lights on the display.
- Press **OFF** to turn off the radio, or press **AUX** or **iPod** to select another sound mode.

To select radio band:

- In radio mode, press **RADIO** to select the radio band (AM/FM).
- The selected radio band icon lights on the display.

To tune frequency:

- Press << or >>. The selected frequency shows on the display.
- Press and hold to automatically search for the next available station.

Antenna

Built-in AFC

The Built-in Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

AM Antenna

For AM reception, connect the AM antenna loop to the back of the radio. Stretch out the antenna cord to its fullest length and rotate the antenna for better reception.

Station presets

To store a station as preset:

- Tune to a radio station.

- Press **STORE**.
- An available preset location (e.g. **P 1**) shows on the display.
- Press << or >> (or **RECALL**) to select a desired preset location (01 - 20).
- Press **STORE**.
- The existing preset station number shows on the display.
- You can save up to 20 preset stations.

To recall a preset station:

- In radio mode, press **RECALL**.
- The existing preset station number shows on the display.
- Press << or >> (or **RECALL**) to select a desired preset station.

iPod/iPhone

Listening to iPod/iPhone

To connect iPod/iPhone:

- Push the universal dock for iPod on the right of the unit to open it.

- Place the appropriate adapter provided with your iPod/iPhone and then place your iPod/iPhone on the universal dock for iPod/iPhone.

To select iPod mode:

- Press **iPod** on the front of the unit to select the iPod mode.
- The iPod mode icon (**☐**) lights on the display.
- Playback from the iPod/iPhone starts automatically.
- If no iPod/iPhone is connected in the iPod mode, the unit will exit the iPod mode and turn off automatically.

To recall a preset station:

- In radio mode, press **RECALL**.
- The existing preset station number shows on the display.
- Press << or >> (or **RECALL**) to select a desired preset station.

Works with:

- iPhone 3GS 16GB, 32GB
- iPhone 3G 8GB, 16GB

Made for:

- iPod touch 2nd generation 8GB, 16GB, 32GB
- iPod touch 1st generation 8GB, 16GB, 32GB
- iPod nano 5th generation 8GB or 16GB
- iPod nano 4th generation (video) 8GB, 16GB
- iPod nano 3rd generation (video) 4GB, 8GB
- iPod classic 80GB, 160GB
- iPod nano 2nd generation (aluminum) 2GB, 4GB, 8GB
- iPod nano 1GB, 2GB or 4GB
- iPod 5th generation (video) 30GB, 60GB, 80GB
- iPod mini 4GB, 6GB
- iPod 4th generation 40GB
- iPod 4th generation (color display) 20GB, 30GB, 40GB, 60GB

Sleep function

In the sleep mode, the radio, iPod or AUX mode can be set to operate for a certain period of time before turning off automatically.

To set the sleep time:

- Press **SLEEP** repeatedly to cycle among the sleep time available (90min, 60min, 30min, 15min and Off. The sleep time is default to 90 min).
- The icon **☾** flashes while selecting.

- When the desired sleep time is selected, release **SLEEP** and wait for about 5 seconds, the sleep time is now set.
- The icon **☾** lights on the display.

To listen to the radio:

- The radio turns on by default. If not, press **RADIO** and select a radio station as usual.

To listen to the iPod/iPhone:

- Press **iPod** and then press << or >> to select a file on the iPod/iPhone. Playback will be in repeat all files mode automatically.
- If iPod mode is selected in your last sleep mode setting, the iPod/iPhone will start to play, instead of the radio.
- The radio will be played whenever

the iPod mode is selected but without an iPod/iPhone connected.

To listen to the auxiliary player:

- If an auxiliary player (e.g. mp3 player) is connected, press **AUX** to select AUX mode and start playback on your auxiliary player.

To change or check the remaining time in sleep mode:

- Press **SLEEP** once to check the remaining sleep time. Press **SLEEP** repeatedly to select another sleep time.

To cancel the sleep mode:

- If you decide to turn off the unit sooner, press **SNOOZE**, **OFF** or press **SLEEP** repeatedly to select “OFF”.

Display brightness

Press **BRIGHTNESS** to dim the display and press again to restore to the original brightness level.

Warranty information

Limited warranty
12 Month Limited Warranty Applies to RCA Audio/Video Products

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or

cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR

ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

How to make a warranty claim:

- If your product is capable of storing content (such as an mp3 player, digital voice recorder, etc), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product

will be returned with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will be responsible to restore any personal preference settings.

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Audiovox Electronics Corp.
Attn: Service Department.
150 Marcus Blvd.
Hauppauge N.Y. 11788
1-877-833-3491

- Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox.
- Pay any charges billed to you by the Exchange Center for service not

covered by the warranty.

- A new or refurbished unit will be shipped to you freight prepaid.

What we will do:

Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

For Canada Customers, please ship to:
Audiovox Return Centre
c/o Genco
6685 Kennedy Road,
Unit#3, Door 16,
Mississauga, Ontario
L5T 3A5



Audiovox Electronics Corp.
150 Marcus Blvd., Hauppauge, NY 11788
©2010 Audiovox Electronics Corp.
Trademark(s) * Registered
Printed in China

