

**FCC statement**

Note : This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution :** Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment.

**Industry of Canada regulatory information**

CAN ICES-3 (B)/NMB-3 (B)

**Avis d'Industrie Canada**

CAN ICES-3 (B)/NMB-3 (B)

**Battery Installation**

Your RCR503BE universal remote requires 2 new AAA alkaline batteries (sold separately).

**To install the batteries:**

1. Turn the unit over, and remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.

**Battery Precautions:**

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

**Programming with Direct Entry**

To program your remote to control up to three components, follow these steps:

1. Manually turn on the component you wish to program the remote to operate.
2. Find the four-digit code for your brand of TV, VCR, DVD, satellite receiver, cable box, or digital TV converter in the enclosed code lists.
3. Press and hold the **CODE SEARCH** key until the indicator light turns on.
4. Release the **CODE SEARCH** key.
5. Press and release the **TV, VCR-DVD** or **SAT-CBL-DTC** key. The indicator light blinks and then remains lit.

Note: DTC refers to digital TV converter.

6. Enter the four-digit code, using the numeric keypad. After the code is entered, the indicator light turns off.

Note: If the indicator light blinks multiple times, you've entered an invalid code. Start from step 2 again.

7. Aim the remote at the component and press the **ON-OFF** key. The component should turn off.

Note: If your component does not respond, try all the codes for your brands. If the codes do not work or your brand is not listed, try the **Code Search Method** that follows.

**Programming With Code Search**

If your TV, VCR, DVD, satellite receiver, cable box, or digital TV converter does not respond after you have tried all the codes for your brands, or if your brand is not listed, try searching for your code via the **Code Search Entry Method**. To program your remote via the **Code Search Entry Method**, follow these steps:

1. Manually turn on the component you wish to program the remote to operate.
2. Press and hold the **CODE SEARCH** key until the indicator light turns on.

3. Release the **CODE SEARCH** key.
4. Press and release the component key you wish the remote to control—**TV, VCR-DVD** or **SAT-CBL-DTC** key. The indicator light blinks once and then remains lit.

- Important:** Find the **ENTER** key on your remote. Press the **ENTER** key on your remote while the remote is in **VCR** mode, this button toggles between **VCR** and the **TV** input.
5. Press and release the **ON-OFF** key until the component turns off.
  6. As soon as the component turns off, press the **ENTER** key within 4 seconds. The indicator light turns off.

- Important:** You may have to press the **ON-OFF** key up to 200 times.
7. While the component turns off, press the **ENTER** key within 4 seconds. The indicator light turns off.

- Note:** If you wait longer than 4 seconds to press **ENTER**, the remote goes to the next code—you will need to start the code search from step 1 again.

**Menu Function – TV, SAT•CBL•DTC, VCR•DVD**

The Menu function on your remote is used to make changes on selected settings. The **MENU** key operates in **TV**, **DBS** and **DVD** Modes. Each menu varies from brand to brand.

The **TV** Menu is used to make changes in the **TV** settings, such as changing color, channels and timers. The **SAT-CBL-DTC** Menu navigates through the **Menu** screens to make changes to settings. The **VCR** or **DVD** Menu you can navigate to languages, subtitles and more.

While in **Menu Mode**, these keys function as follows:

| Mode                            | Vol up / down           | Ch +/-               |
|---------------------------------|-------------------------|----------------------|
| <b>TU, SAT-CBL-DTC, VCR-DVD</b> | Cursor moves right/left | Cursor moves up/down |

To use the **Menu function**, follow these steps:

1. Press the component button whose menu you wish to access (**TV, VCR-DVD** or **SAT-CBL-DTC**).

2. Press the **MENU** key. The menu of the chosen component is shown.

**Note:** Some functions of some brands may not be fully supported.

3. To exit the menu mode press the corresponding component key on the remote (**TV, VCR-DVD** or **SAT-CBL-DTC**).

**Special Notes for Menu Use**

1. In the **Menu Mode** of **RCA, GE and PROSCAN TVs**, pressing the **MENU** key selects the highlighted item. The numeric keys may also be used to select the menu choice.

2. For **SONY** components, pressing the **ENTER** key while in **Menu Mode** returns to the previous menu.



