



RCRTBL06BE

Universal Remote Control Owner's Manual

Manual del Propietario (parte posterior)

SAVE THIS MANUAL AND THE CODE LISTS!

Remote controls can sometimes lose their programming when you change the batteries. Make sure you keep the manual and code lists in a safe place so that you can reprogram the remote if you need to.

Step 1: Install the batteries

Your universal remote requires two CR2032 coin-cell batteries (included).

To install the batteries:

1. Remove the battery compartment cover.
2. Place the batteries in the compartment with their (+) markings up. Push each battery up under the ridge in the compartment with the "+" marking.
3. Push the battery cover back into place.

Battery Saver

Your universal remote control saves battery power by automatically turning off if any key is pressed for more than 60 seconds. This saves your battery life should your remote get stuck in a place where the keys remain depressed, such as between sofa cushions.

Step 2: Program your remote

To use this universal remote with your home entertainment system, first you need to program it to control your devices. There are four ways you can program the universal remote to operate your devices. Try them in the order listed.

- The **Direct Code Entry** lets you enter a code from the accompanying code list for your brand of device.
- The **Brand Code Search** searches through the codes for select brands of devices.
- The **Auto Code Search** goes automatically through all the codes for the device you're trying to control.
- The **Manual Code Search** lets you manually go through all the codes for the device you're trying to control.

Is the POWER key illuminated?

YES: You're done! You've programmed this device key.


NO, it blinked four times and turned off: You have either entered a code number that is not in the code lists or missed a step in the code entry procedure. Try step 3 again.

Direct Code Entry


Direct Code Entry lets you enter a code from the accompanying code list for your brand of device.

TIP: Each device key is associated with a type of device—the TV is preset to search for TVs, SATELLITE CABLE for satellite receivers or cable boxes, STREAM 1 and 2 for streaming players, DVD B RAY for DVD and Blu Ray players, and AUDIO SOUNDBAR for audio receivers and sound bars. To program a device key for a different type of device, see the Changing a Key's Device Type section.


1. Manually turn on the device you want to control.

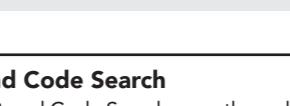


2. Find the Code List that came with the remote. Locate the section for the type of device you're trying to program, and find your brand in that section. Circle the codes for your brand and keep them handy.

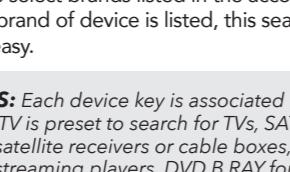


3. Press and hold the device key you want to program (the POWER key illuminates).

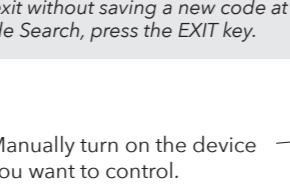


4. While you're holding down the device key, use your other hand to enter the first five-digit code for your brand in the code list (the POWER key turns off after the first digit).

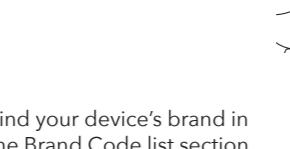


5. Point the remote directly at the front panel of the device you want to control. Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device's brand.

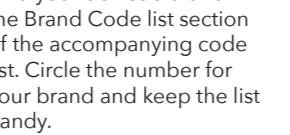


6. Point the remote directly at the front panel of the device you want to control. Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device's brand.

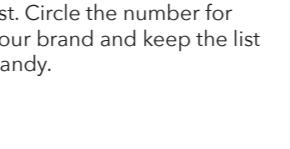

7. Press and hold the device key you want to program. The POWER key illuminates.

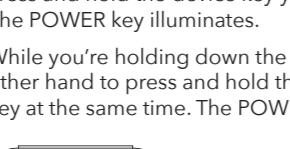

8. While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key turns off.

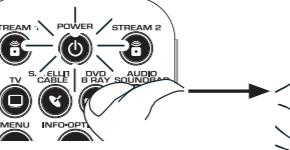

Is the POWER key illuminated?

YES: You're done! You've programmed this device key.

NO, it blinked four times and turned off: You have either entered a code number that is not in the code lists or missed a step in the code entry procedure. Try step 3 again.

Notes

Test the remote with the device to make sure the device key is programmed with the correct code for maximum functionality. If some features don't work, try a different code in the list.

TIP: Each device key is associated with a type of device—the TV is preset to search for TVs, SATELLITE CABLE for satellite receivers or cable boxes, STREAM 1 and 2 for streaming players, DVD B RAY for DVD and Blu Ray players, and AUDIO SOUNDBAR for audio receivers and sound bars. To program a device key for a different type of device, see the Changing a Key's Device Type section.


4. Wait until the POWER key comes on and stays on. Then release both keys.

Auto Code Search


The Auto Code Search goes automatically through all the codes for the device you're trying to control. When you find the one that operates your device, you can stop the search and store that code.

TIP: Each device key is associated with a type of device—the TV is programmed with the correct code for maximum functionality. If some features don't work, try a different code. See the "Testing the Code for Maximum Functionality" section below for more information.


5. Look at the numbers you circled for your device's brand code number. Press those numbers on the remote keypad.

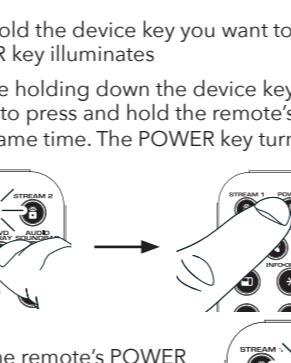


6. Point the remote directly at the front panel of the device you want to control. Press POWER on the remote and wait 2 seconds. The remote is testing a single code for your device's brand.

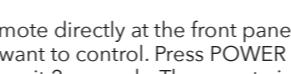

7. Press and hold the device key you want to program. The POWER key serves as an indicator light to provide feedback.

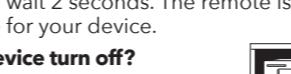

8. Illuminated POWER key comes on and stays on. Then release both keys.

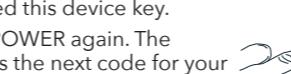


NOTES


Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming the remote to control.

While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key turns off.


9. Press and hold the device key you want to program. The POWER key illuminates.

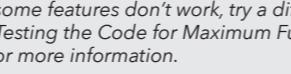


10. While holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key turns off.

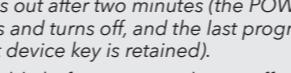


11. Press and hold the device key you want to program. The POWER key remains on.

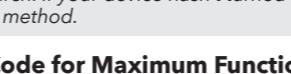


12. Release both keys. The POWER key turns back on.

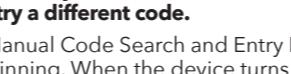

13. Repeat step 9 until the remote's POWER key blinks four times and turns off, and the last programmed code under that device key is retained.

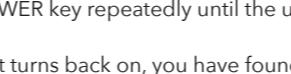

14. Press and hold the device key you want to program. The POWER key blinks four times and turns off.

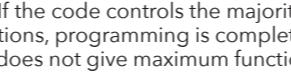

NOTES

Throughout the programming of each key, be sure to keep the remote pointed at the IR sensor of the device you are currently programming the remote to control.

TIP: Each device key is associated with a type of device—the TV is preset to search for TVs, SATELLITE CABLE for satellite receivers or cable boxes, STREAM 1 and 2 for streaming players, DVD B RAY for DVD and Blu Ray players, and AUDIO SOUNDBAR for audio receivers and sound bars. To program a device key for a different type of device, see the Changing a Key's Device Type section.

15. Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate.

During the Auto Code Search, the remote ignores keypresses that aren't part of the search.

Retrieving the actual code and writing it down will save you time if you ever need to program the remote again. If the codes are recorded, you can use the Direct Entry method to reprogram your remote to control your device, you have to reassigned them first.

16. Remove any obstacles between the remote and the device. Make sure the batteries are fresh and are properly installed. Replace the batteries with two new CR2032 batteries, if necessary (see the Battery Installation section).

The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Auto Code Search, press the EXIT key.

Tour of the Remote

In most cases, the keys on this remote perform the same functions as the keys on your original remotes. If you used the Direct Code Entry method, this is easy. Just find the codes you entered and make a note of them in the boxes below. If you used one of the Code Search methods to program the remote control, this is easy. Just find the codes you entered and make a note of them in the boxes below. If you used the Direct Entry method but don't remember the code, you will need to retrieve each device's five-digit code. Retrieving the actual code and writing it down will save you time if you ever need to program the remote again. If the codes are recorded, you can use the Direct Entry method to reprogram your remote to control your device, you have to reassigned them first.

Illuminated POWER key serves as an indicator light to provide feedback.

Device keys (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR) put the remote in the right mode to control your device.

Press and hold the device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR) whose code you wish to retrieve. The POWER key illuminates. Keep pressing the device key.

While holding down the device key, use your other hand to press and hold the remote's POWER key. After holding down both keys for three seconds, the POWER key turns back on.

Release both keys. The POWER key remains on.

Repeat the Auto Code Search Method from the beginning. When your device turns off, do not stop searching. Instead, with the unit now off, continue to press the ► key every 5 seconds until the unit turns back on.

Once the unit turns back on, press the ◀ key on the remote every 2 seconds until your device turns off again. When your device turns off again, press the ◀ key.

Keep pressing POWER every 2 seconds until your device turns off again. When it does, press ▶.

TIPI: Because there are so many codes, you may have to press the POWER key many times—possibly hundreds of times.

GUIDE+HOME puts the remote in guide mode for satellite receivers or cable boxes, and accesses the home screen for streaming players.

Starting with the number 1 key, press and release each number key on the keypad in the following order: 1-9, then 0. The number that causes the POWER key to blink is the first number of the code. As you find each number of the code, write it down for future reference.

• If you are using the Direct Entry programming method to enter the codes for your device and the unit is still not functioning properly, try a different search method.

Keep pressing POWER every 2 seconds until your device turns off again. When it does, press ▶.

Advanced Functions

Code Retrieval

Once you've programmed the remote to control your devices, you may want to record the codes for future reference. If you used the Direct Code Entry method, this is easy. Just find the codes you entered and make a note of them in the boxes below.

While you're holding down the device key, use your other hand to press and hold the remote's POWER key at the same time. The POWER key illuminates.

During the Auto Code Search, the remote ignores keypresses that aren't part of the search.

Retrieving the actual code and writing it down will save you time if you ever need to program the remote again. If the codes are recorded, you can use the Direct Entry method to reprogram your remote to control your device, you have to reassigned them first.

• Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate.

During the Auto Code Search, the remote ignores keypresses that aren't part of the search.

Retrieving the actual code and writing it down will save you time if you ever need to program the remote again. If the codes are recorded, you can use the Direct Entry method to reprogram your remote to control your device, you have to reassigned them first.

• Make sure the batteries are fresh and are properly installed. Replace the batteries with two new CR2032 batteries, if necessary (see the Battery Installation section).

The POWER key blinks four times and turns off when the remote has gone through all the codes. The remote exits the Auto Code Search, press the EXIT key.

• Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate.

During the Auto Code Search, the remote ignores keypresses that aren't part of the search.

Retrieving the actual code and writing it down will save you time if you ever need to program the remote again. If the codes are recorded, you can use the Direct Entry method to reprogram your remote to control your device, you have to reassigned them first.

Troubleshooting

Problem: The POWER key does not light when you press a key.

- You may have pressed an invalid key for the mode the remote is in.

• Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate.

• Remove any obstacles between the remote and the device. Make sure the batteries are fresh and are properly installed. Replace the batteries with two new CR2032 batteries, if necessary (see the Battery Installation section).

Problem: Remote backlighting doesn't work.

- Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate.

• Make sure the batteries are fresh and are properly installed. Replace the batteries with two new CR2032 batteries, if necessary (see the Battery Installation section).

Problem: The remote can't be programmed to operate your device.

- If the POWER key still illuminates when you press a key on the remote, but backlighting does not come on for the other keys when you press the key, replace the battery responsible for backlighting (the other battery runs all the other remote functions and is still working). See the Battery Installation section and replace the TOP battery only (leave the bottom battery in).

• Make sure the remote is in the correct mode by pressing the corresponding device key (TV, SATELLITE CABLE, STREAM 1 and 2, DVD B RAY, AUDIO SOUNDBAR). This tells the remote which device to operate.

• If the POWER key does not illuminate when you press a key on the remote, replace both batteries. Follow the directions in the battery replacement section.

Problem: The remote will not change channels on device.

-

